



FERRO CONCEPTS - CEC SIDE PLATE POCKET ADAPTER INSTALLATION

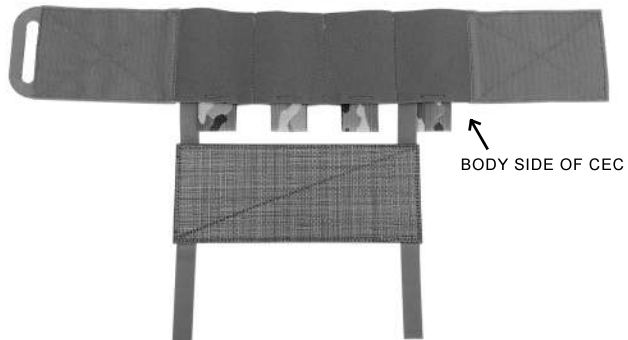


1. INSERT THE VELCRO STRAPS OF THE ADAPTER INTO THE BOTTOM OF THE CEC CUMMERBUND AS SHOWN.
NOTE: ONLY INSTALL THE ADAPTER ON BODY SIDE OF CEC.



3. FOLD THE SECOND SET OF VELCRO STRAPS OVER THE TOP AND INSIDE OF CUMMERBUND. SECURE THE VELCRO STRAPS TOGETHER WITH MINIMAL UP AND DOWN PLAY.

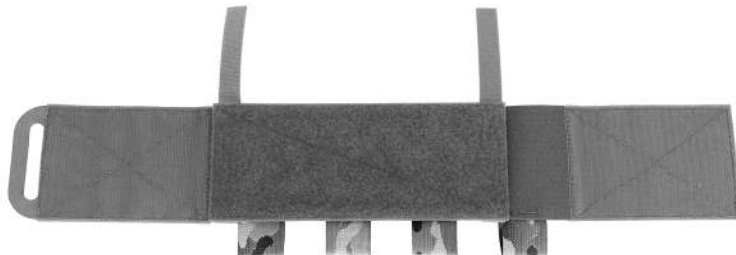

2. INSERT THE VELCRO STRAPS ALL THE WAY AND FOLD THE ADAPTER OVER THE INSIDE OF THE CUMMERBUND.

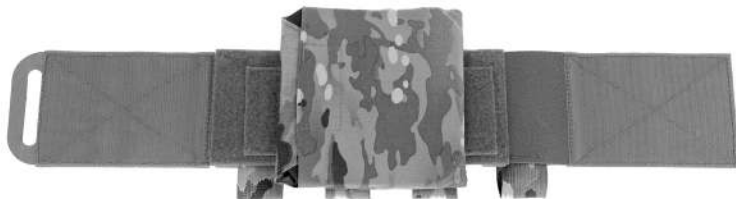

4. REPEAT FOR OPPOSING SIDE. YOU CAN NOW ATTACH THE 3AC SIDE PLATE POCKETS TO THE INSIDE OF YOUR CEC CUMMERBUND.