


# FERRO CONCEPTS - THE SLINGSTER® - INSTRUCTIONS

MOUNTING HARDWARE IS NOT INCLUDED. USE YOUR EXISTING HARDWARE OR VISIT [WWW.FERROCONCEPTS.COM](http://WWW.FERROCONCEPTS.COM) TO PURCHASE.

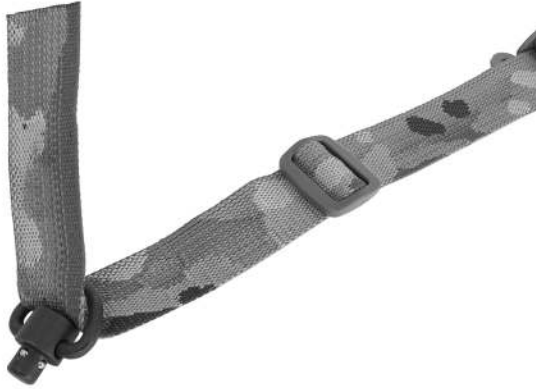

1. WEAVE WEBBING END OF THE SLINGSTER® INTO YOUR CHOSEN HARDWARE. ( INSTRUCTIONS ARE THE SAME IF DIRECT MOUNTING ENDS TO A FIREARM)



2. ADJUST TO DESIRED LENGTH AND FEED THE WEBBING END BACK THROUGH THE TRI-GLIDE.




3. FOR EXTRA SECURITY, WEAVE THE WEBBING END OVER AND THROUGH THE ONE SIDE OF THE TRI-GLIDE REPEAT STEPS 1-3 FOR OPPOSING END.



\*PAD CAN ALSO BE FULLY REMOVED IF DESIRED

4. TO POSITION THE ADJUSTABLE PAD TO YOUR PREFERENCE\*, SLIDE THE WEBBING EVENLY THROUGH THE TRI-GLIDES LOCATED ON BOTH ENDS OF THE PAD.

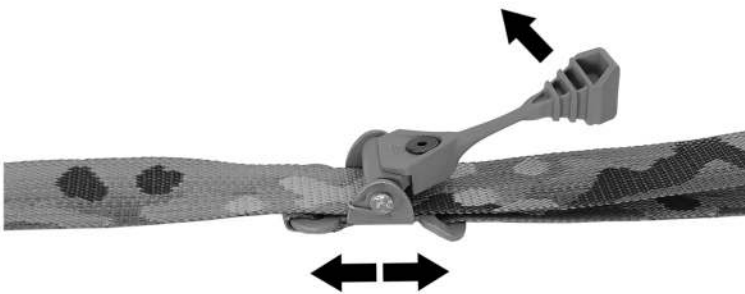

5. TO MANIPULATE AND QUICKLY ADJUST THE LENGTH OF THE SLINGSTER®, LIFT THE PULL TAB AND PUSH OR PULL THE SLIDER. RELEASE PULL TAB TO LOCK SLIDER.



\*IWC 2 TO 1 TRI-GLIDE IS NOT INCLUDED

6. SINGLE POINT WITH A QD SWIVEL OR SLING HOOK WILL REQUIRE A IWC 2 TO 1 TRI-GLIDE\* TO BE INSTALLED IN REPLACE OF THE PROVIDED PLASTIC TRI-GLIDE.